

IFR 4000 Operation Manual (Issue-6)

SUMMARY OF CHANGES

ERRATA SHEETS/REVISIONS INCORPORATED
None
ECNS INCORPORATED
None
MISCELLANEOUS CHANGES
Export notice added to each page, and date on each page changed to match date of Issue. Table of Contents and Index changed to match the page shifts (if required). Other pages may have been changed to correct previous errors or to match current style and layout standards (if required).

Detailed changes incorporated into Issue-6 of the IFR 4000 Operation Manual include the following:

PAGE	CHANGE
Service Upon Receipt	Changed content to reflect contents in Getting Started Manual.
1-2-2, Page 3	<p><b><u>WAS</u></b></p> <p><b>6. REMOTE Connector</b> DB15 Type Connector used for remote operation and software upgrades. Contains RS-232, USB Host and USB Peripheral connections.</p> <p><b><u>IS</u></b></p> <p><b>6. REMOTE Connector</b> DB25 Type Connector used for remote operation and software upgrades. Contains RS-232, USB Host and USB Peripheral connections.</p>

# IFR 4000 Operation Manual (Issue-6)

## SUMMARY OF CHANGES

PAGE	CHANGE
App. E, Page 1	<p><b>WAS</b></p> <p style="text-align: right;">056P-008</p> <p><b>IS</b></p> <p style="text-align: right;">056P-008</p>